



Product Description

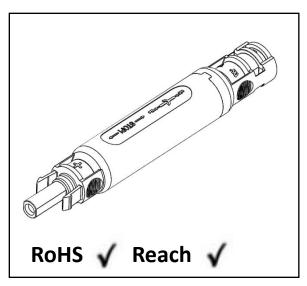

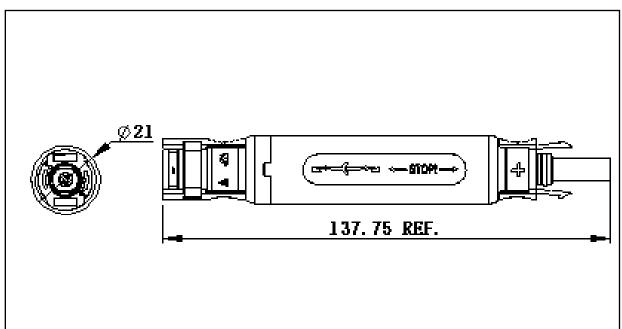

Specification | Model: HDC-41L

1500V PV Fuse Connector



Technical Data

Electrical Specification

Rated Voltage	1500V DC
Rated Impulse Voltage	16KV
Rated Current	32A MAX.
Wet Insulation Resistance	≥500MΩ
Contact Resistance	≤0.25mΩ
Overvoltage Category/Pollution Degree	CAT III/2
Safety Class	II
Mechanical Specification	
Mating Cycle	≥200
Unlock mode	Tool unlock

≥ 80N ≤20 N

Enviromental Specification

Connector Retention Force

Connector Pull-Out Force

Waterproof Rate	IP65/IP68 (1m,1H)
Application Temperature	-40 °C~+85°C
Max. Operating temperature	85°C
Flamming Level	UL94-V0
Ammonia Resistance	Pass
Material	
Plastic Material	PA(f1)
Pin Material	Copper Alloy,Sn Plating
Sealing Material	Sillicone Rubber

Specification | Model: HDC-41L

1500V PV Fuse Connector



Certification / Certificate

TUV Certification

Logo Certification Reference Standard Certification No.

TÜV SÜD IEC62852 B1137880002

Unlock Tool






T6 Torx Wrench

Specification | Model: HDC-41L


1500V PV Fuse Connector




Fuse Replacement Instruction

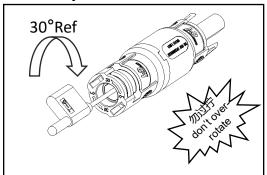

Clockwise rotate the connector through the T6 security torx wrench with 30 degrees.(Don't over-rotate)

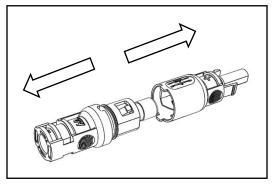


Hold the 2 ends of the connector and pull them in the oppsite direction to separate the rubber core of the connector.

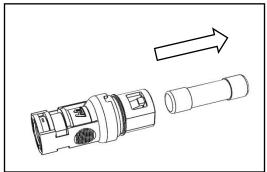


Pull out the fuse of the rubber core and then replace it.


Fuse Installation Instruction

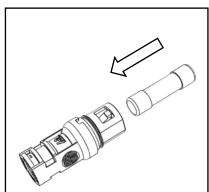

Insert either end of the fuse into the rubber core of the connector.

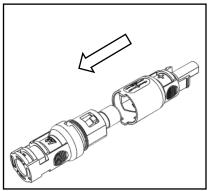

Insert the rubber core into another Complete this installation while part of the connector through the fool-proofing position.

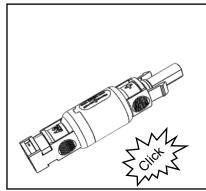

hearing the "Click" sound.